

SCHWANDER (KIMBALL) ACTION PARTS



HAMMER BUTTS

For Kimball 36", 38", 40", 41", 42" pianos.

No. 3720 - Each

Same as 3720 but for Wood Bead Rail.

No. 3720A - Each



WHIPPENS

For Kimball 40", 41" pianos.

No. 3725 - Each

Same as 3725 but for Wood Bead Rail.

No. 3725A - Each



HAMMER BUTTS

For Kimball 45" piano.

No. 3721 - Each

Same as 3721 but for Wood Bead Rail.

No. 3721A - Each



WHIPPENS

For Kimball 42" pianos.

No. 3726 - Each

Same as 3726 but for Wood Bead Rail.

No. 3726A - Each



DAMPER LEVERS


With flange for Kimball 36", 38" 42", 45" pianos.

No. 3723 - Each

DAMPER FLANGES

With spring for all Kimball pianos.

No. 3730 - Each

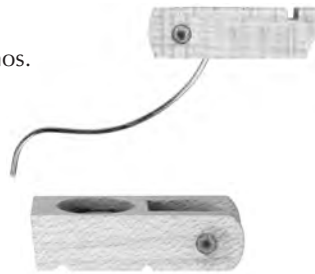

WHIPPEN FLANGES

For all Kimball pianos.

No. 3731 - Each

Same as 3731 but for wood bead rail.

No. 3731A - Each



WHIPPENS

For Kimball 45" pianos.

No. 3727 - Each

Same as 3727 but for Wood Bead Rail.

No. 3727A - Each

BUTT FLANGES

Wire Bead rail type.

No. 3732 - Each

Same as 3732 but for wood bead rail.

No. 3732A - Each

Please call our Customer Service Department for any miscellaneous parts not shown.

